

- 1. To disclose and post all Rules & Regulations, Danger, Warning and Caution labels affixed on the machine to their customers/users.
- 2. Equipment to be installed by TFI Authorized Dealer or a service company approved by TFI.
- 3. Provide trained personnel, supervision and correct usage of the equipment.
- 4. Provide scheduled inspection, maintenance & repairs and must be performed by TFI Authorized Dealer or a service company approved by TFI.
- 5. Must use only genuine TFI replacement parts.
- 6. **A WARNING** Machine must be anchored to a solid and level surface.


Table of Contents




Overhead Specifications	Page 3
Danger, Warning, & Caution Labels Information	Page 4-7
Anchoring Unit	Page 8
Important Safety Instructions	Page 9
Registration, Service & Assembly	Page 10
Inspection/Maintenance	Page 11
Cable Inspection	Page 12
Step 1	Page 13
Step 2	Page 14
Step 3	Page 15
Step 4	Page 16-17
Step 5 Cable Routing	Page 18-19
Step 6 Cable Routing	
Step 7	Page 22
Step 8	
Parts List	
Pre-Assembled Components	Page 25-26
Notes	Page 27
Warranty	Page 28

TuffStuff Fitness International Inc. continually engages in research related to product improvements. Please take the time to carefully read through this owner's manual thoroughly. Instructions contained in this owner's manual are not intended to cover all details or variations possible with equipment, or to cover every contingency that may be met in conjunction with assembly, installation, operation, maintenance or troubleshooting of the equipment. Even though we have prepared this owner's manual with extreme care, neither the manufacturer nor the author can accept responsibility for any errors in, or omission from, the information given. Should additional information be required, or should situations arise that are not covered by this owner's manual, the matter should be directed to Customer Service at TuffStuff Fitness International Inc. in Chino, California.




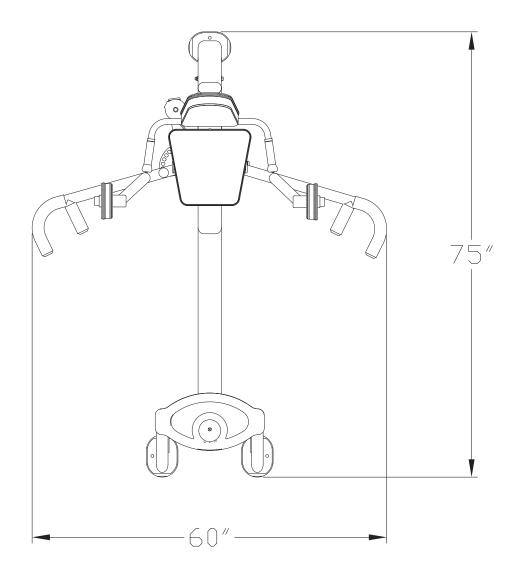


L 75" X W 60" X H 59" MAX-LOAD WEIGHT LIMIT -150 lbs

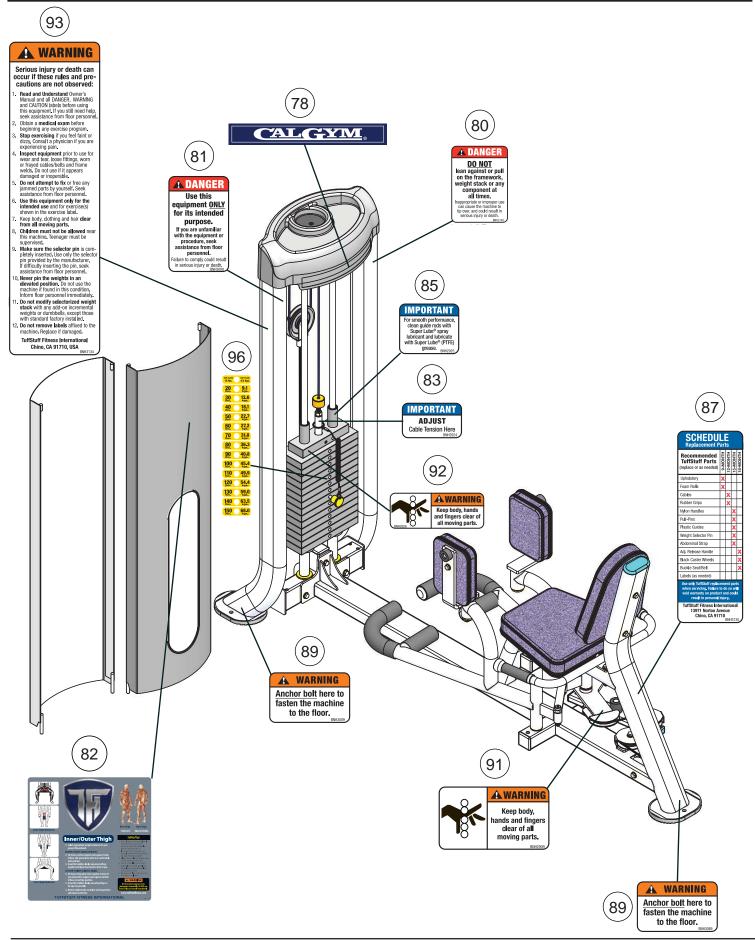

CG-9515 Inner/Outer Thigh

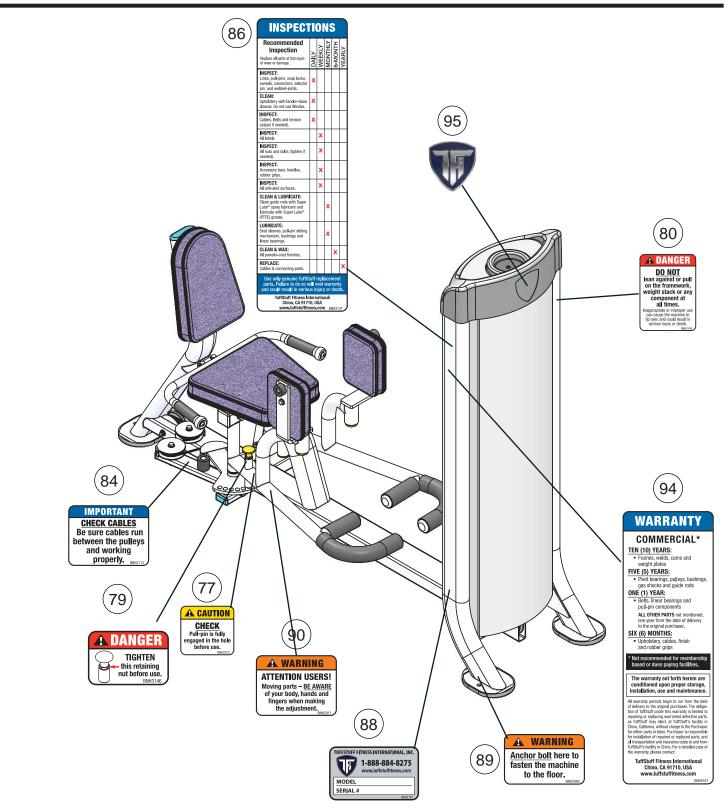

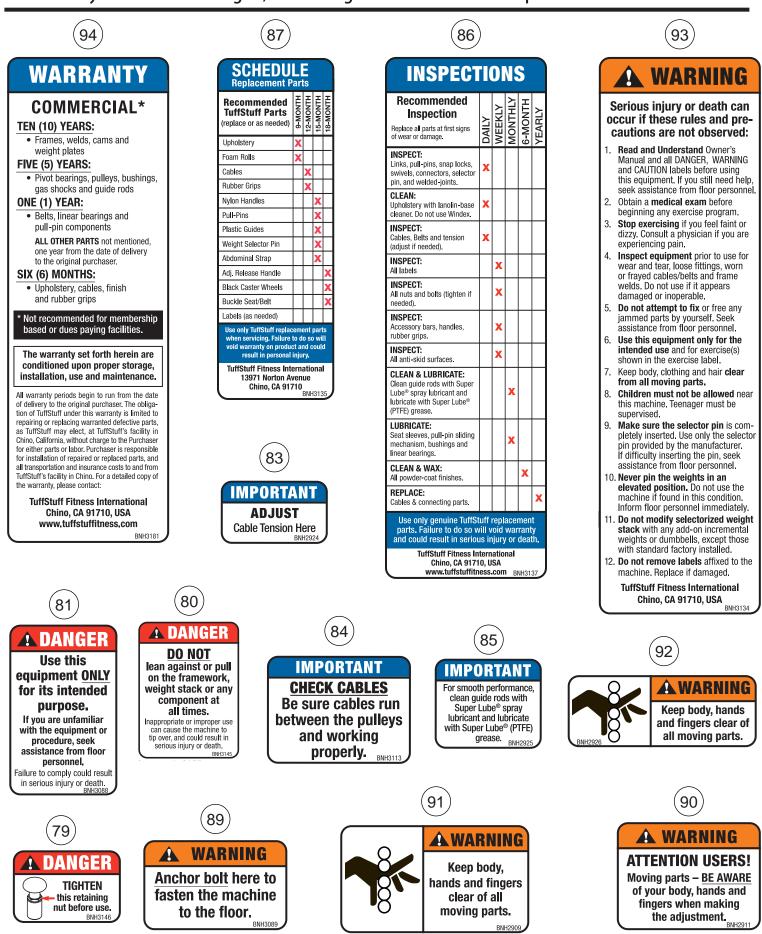





CHECK Pull-pin is fully engaged in the hole before use.

RNH201

BE ALERT!

THE FITNESS EQUIPMENT IN THIS FACILITY PRESENTS HAZARDS WHICH, IF NOT AVOIDED, COULD CAUSE SERIOUS INJURY OR DEATH.

Prior to using the equipment, READ the warning labels and instruction placards affixed to each machine.

If you are unsure on how to use a machine, seek the assistance of our floor personnel. We will be happy to instruct you on how to use the equipment properly.

Immediately report any piece of equipment that is not functioning properly to our floor personnel so that it may be evaluated and service promptly.

DO NOT ATTEMPT to use or fix any piece of equipment that is not functioning properly.

TUFFSTUFF FITNESS INTERNATIONAL, CHINO, CA 91710

It is extremely important that the **Facility Sign** shown to the left be installed in plain view of the unit.


You should have received it along with this Owner's Manual. If you did not receive this Facility Sign with your order, you can obtain one at no cost to you from TuffStuff Fitness by contacting our service department at:

1 (888) 884-8275 service@tuffstuff.net service1@tuffstuff.net

ASTM F1749-96

Anchoring Unit

Holes on frame are provided for anchoring the unit to the floor. See anchoring hole location below.

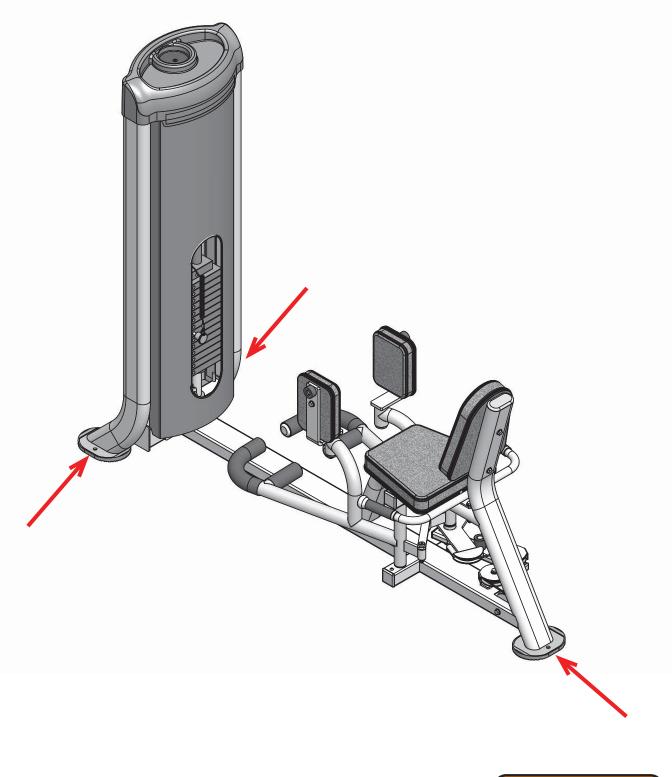



Anchor bolt here to fasten the machine to the floor.

Important Safety Instructions

V

It is the responsibility of the facility owner and/or owner of the equipment to review the Owner's Manual with their facility personnel and understand all Danger, Warning and Caution labels affixed on the machine. It is the responsibility of the floor personnel to instruct users on proper operation of the equipment and review all danger, warning and caution labels.

WARNING SERIOUS INJURY OR DEATH CAN OCCUR IF THESE SAFETY PRECAUTIONS ARE NOT OBSERVED:

- 1. Obtain a medical exam before beginning any exercise program.
- 2. Read and understand Owner's Manual and all **Danger, Warning and Caution** labels before using this equipment. If you still need help, seek assistance from floor personnel.
- 3. **Inspect the equipment** before each use for wear and tear, loose fittings, worn or frayed cables and frame welds. DO NOT USE if it appears to be inoperable or damaged.
- 4. Stop exercising if you feel faint or dizzy. Consult a physician if you are experiencing pain.
- 5. Use this equipment only for the intended use.
- 6. Keep body, clothing and hair clear from all moving parts. Do not attempt to free any jammed parts by yourself.
- Always warm-up before and cool-down after weight training. Warm-up for 10-15 minutes with stretching and cardiovascular exercises. Cool-down should include light stretching exercises for 5-15 minutes.
- 8. Never hold your breath will limit the flow of oxygen to your brain and may cause dizziness. The most often used breathing pattern is inhaling during least resistance and exhaling during maximum resistance.
- 9. Do not use accessories or accessory attachments that are not recommended by TFI.
- 10. Make sure selector pin is completely inserted. Use only the selector pin provided by the manufacturer.
- 11. Never pin the weights in an elevated position. Do not use the machine if found in this condition.

Facility Safety Guidelines and Practices

- 1. Read and understand the Owner's Manual before assembling, servicing or using the equipment.
- 2. Equipment to be installed by TFI Authorized Dealer or Professional Service Company approved by TFI.
- 3. Make sure each machine is set up and operated on a solid level surface. Do not install equipment on an uneven surface.
- 4. **Anchoring of equipment must be completed** at time of installation and inspected prior to use. Failure to anchor the machine to the floor could cause the machine to tip or fall over due to incorrect usage and misuse, and could result in serious injury or death.

- 5. Provide an adequate safety perimeter between the machine, walls and other equipment to ensure that the facility has proper clearance for usage and training.
- 6. Post and disclose all safety, rules and regulations on a bulletin board easily accessible to users.
- 7. Perform regular maintenance (see Inspection Label). Pay special attention to areas most susceptible to wear and tear, including but not limited to cables, pulleys and rubber grips.
- 8. **Do not** lean against or pull on the framework, weight stack or any component at all times.
- 9. **Children must not** be allowed near the equipment. Teenager must be supervised.
- 10. Replace immediately all parts at first sign of wear or damage. If unable to replace worn or damaged components/parts, remove machine from service until the repair is made.
- 11. Use only genuine TuffStuff replacement parts. Failure to do so will void warranty and could result in serious injury or death to the users.
- 12. **Do not remove** any decals affixed to the machine. Replace if damaged.
- 13. **Do not alter or modify** the original manufacturer's weight stack with any add-on incremental weights, weight plates or dumbbells except those with standard factory installed option.
- 14. Maintain a service contract with a TFI Authorized Dealer or a Professional Service Company approved by TFI. Keep a service log of all maintenance and repair activities. NOTICE: It is the sole responsibility of the owner or facility operator to ensure that regular maintenance is performed.

A DANGER

DANGER: indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

AWARNING

WARNING: indicates a potentially hazardous situation which, if not avoided, will result in death or serious injury.



CAUTION: indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



Thank you for purchasing the CG-9515 Inner/Outer Thigh. This machine is part of the TuffStuff line of quality strength training equipment. To maximize your use of the equipment, please study the Owner's Manual thoroughly.

Registration

To avoid unnecessary delays on warranty parts and to insure that a permanent record of your purchase is on file with our company, be sure to register online at http://www.tuffstuffitness.com or mail to address shown below within 10 days of purchase.

Obtaining Service

Please use this Owner's Manual as your guide to all parts included in your shipment. When ordering parts, you must specify the part number and description from this owner's manual. **Use only genuine TuffStuff replacement parts when servicing the equipment.** Failure to do so will void warranty and could result in serious injury or death.

For information about product operation or service:

uff.net

Retain this Owner's Manual for future reference when ordering service or parts. To assist you better, please be prepared to provide the following information:

- 1. Model Number 3. Serial Number
- 2. Place of Purchase
- 4. Part # and Description

Required Tools

The basic tools that you will need to assemble the CG-9515 but are not limited to:

- 9/16", 3/4", 1/2" combination wrenches
- Adjustable wrench
- Ratchet wrench with 9/16", 3/4", 1/2" sockets
- External retaining ring pliers
- Rubber mallet, measuring tape & utility knife
- Super Lube[®] spray lubricant and grease
- Windex or household glass cleaner

Assembly Requirements

Follow these installation requirements when assembling the CG-9515. Use the overhead view on the Content Page to layout your floor plan before assembling.

Set up the CG-9515 on a clean, solid, flat surface. A smooth, flat surface under the machine helps keep it level.

Allow ample space around the machine for safe unrestricted use and easier access.

Insert all bolts in the same direction. For aesthetic appearance, insert all bolts in the same direction unless specified (in text or illustration) to do otherwise.

Leave room for adjustments. Do not fully tighten fasteners until instructed in the assembly steps to do so (to prevent any difficulty with alignment of parts during the assembly process). When not instructed, tighten fasteners such as bolts, nuts and screws so the unit is stable, but leave room for adjustments.

Assembly Tips


Read all "Notes" on each page before beginning each step.

While you may be able to assemble the CG-9515 using the illustrations only, IMPORTANT safety notes and other tips are included in the text.

Some pieces may have extra holes that you will not use. Use only those holes indicated in the instructions and illustration.

- **NOTE:** With so many assembled parts, proper alignment and adjustment is critical. While tightening the nuts and bolts, be sure to leave room for final adjustments.
- **CAUTION:** Obtain assistance from TFI if you have difficulty assembling the CG-9515. Please do not attempt to complete the assembly as this could result in equipment failure and serious injuries to the users.

Symbols & Description

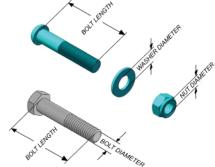

Loosely Tighten SLoosely Tighten



Loosely tighten all hardware in this step. DO NOT Fully Tighten. Some component(s) may need pre-assembly and or alignment during the assembly process.

🖉 Fully Tighten

Wrench tighten all hardware in this step.

Inspection/Maintenance



Perform regular maintenance (see Inspection Label). Pay special attention to areas most susceptible to wear and tear, including but not limited to cables, pulleys and rubber grip. TFI recommends you maintain a service contract with a TFI Authorized Dealer or a Professional Service Company approved by TFI. Keep a service log of all maintenance and repair activities. Extra copies can be downloaded from our website www.tuffstuffitness.com

INSPECT		DNS				IN	SPECTION / MAIN	TENANCE REC	ORDS
Recommended			≻	Т		DATE	REPLACEMENT	REPAIRS	INSPECTED BY
Inspection	┝	WEEKLY	MONTHLY	6-MONTH	RL				
Replace all parts at first signs of wear or damage.	DAILY	WEB	MON	<u>9-M</u>	<u>YEARLY</u>				
INSPECT: Links, pull-pins, snap locks,						1			
swivels, connectors, selector pin, and welded-joints.	X								
CLEAN: Upholstery with lanolin-base cleaner. Do not use Windex.	x								
INSPECT: Cables, Belts and tension	x					1			
(adjust if needed).									
INSPECT: All labels		x							
INSPECT: All nuts and bolts (tighten if needed).		x							
INSPECT: Accessory bars, handles, rubber grips.		x				1			
INSPECT: All anti-skid surfaces.		x							
CLEAN & LUBRICATE: Clean guide rods with Super						1			
Lube [®] spray lubricant and lubricate with Super Lube [®] (PTFE) grease.			X						
LUBRICATE:									
Seat sleeves, pull-pin sliding mechanism, bushings and			x						
linear bearings.							WARRANT	Y REPAIRS	
All powder-coat finishes.				X		DATE	REPLACEMENT	REPAIRS	INSPECTED BY
REPLACE: Cables & connecting parts.					X				
Use only genuine TuffStuff replacement parts. Failure to do so will void warranty and could result in serious injury or death.									
TuffStuff Fitness In Chino, CA 9171 www.tuffstuffitn	IO, U	ISA		NH31	37]			

Cable Inspection



WARNING:

THE FOLLOWING CONDITIONS MAY INDICATE A WORN CABLE. REPLACE IMMEDIATELY.



"NECKING", STRETCHED CABLE COVERING




A TEAR IN THE CABLE COVER



A CRACK IN THE CABLE COVER



A BREAK ON THE CABLE

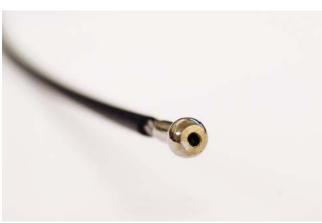

CABLE END SLIPPING OUT

IMPORTANT NOTE:

DAMAGED OR WORN CABLE (AS SHOWN ABOVE) MAY DAMAGE THE PULLEY(S). YOU MUST INSPECT THE PULLEYS AT THIS TIME FOR WEAR AND TEAR. REPLACE IF NEEDED.


Step 1




Step 1 Assembly List	
Description	Qty.
MAIN FRAME	1
WEIGHT STACK FRAME	1
FLAT WASHER 3/8 ID X 1 1/2 OD X 3/16 THICK	3
FLAT WASHER SAE Z/P 3/8"	3
HEX HEAD CAP SCREW GR-5 Z/P 3/8-16 X 3	3
NYLON INSERT THIN PATTERN LOCK NUT Z/P 3/8-16	3
	Description MAIN FRAME WEIGHT STACK FRAME FLAT WASHER 3/8 ID X 1 1/2 OD X 3/16 THICK FLAT WASHER SAE Z/P 3/8" HEX HEAD CAP SCREW GR-5 Z/P 3/8-16 X 3

NOTE:

- 1. It is strongly recommended that 2 people participate in the assembly of this unit.
- 2. Be sure to hold the weight stack frame perpendicular to floor before tightening the screws.

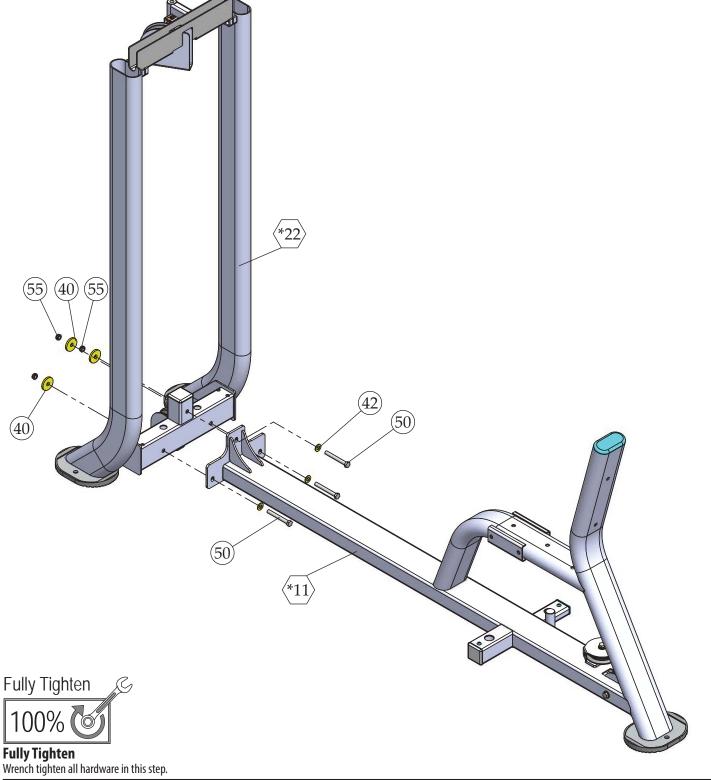


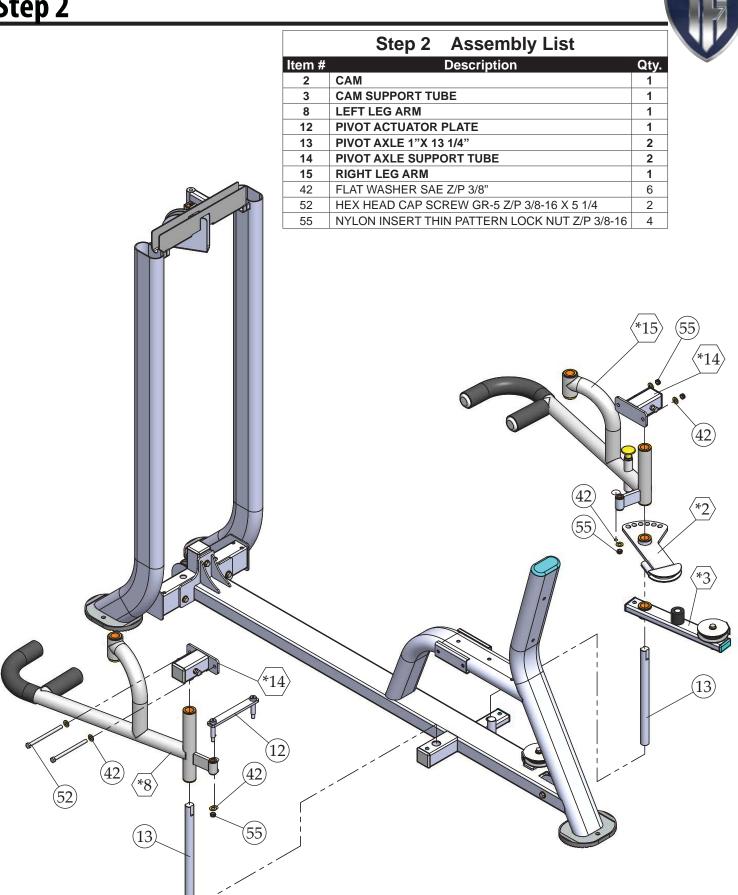


Step 3



	Step 3 Assembly List	
Item #	Description	Qty.
6	HANDLES	1
42	FLAT WASHER SAE Z/P 3/8"	4
49	HEX HEAD CAP SCREW GR-5 Z/P 3/8-16 X 2 3/4	2
55	NYLON INSERT THIN PATTERN LOCK NUT Z/P 3/8-16	2

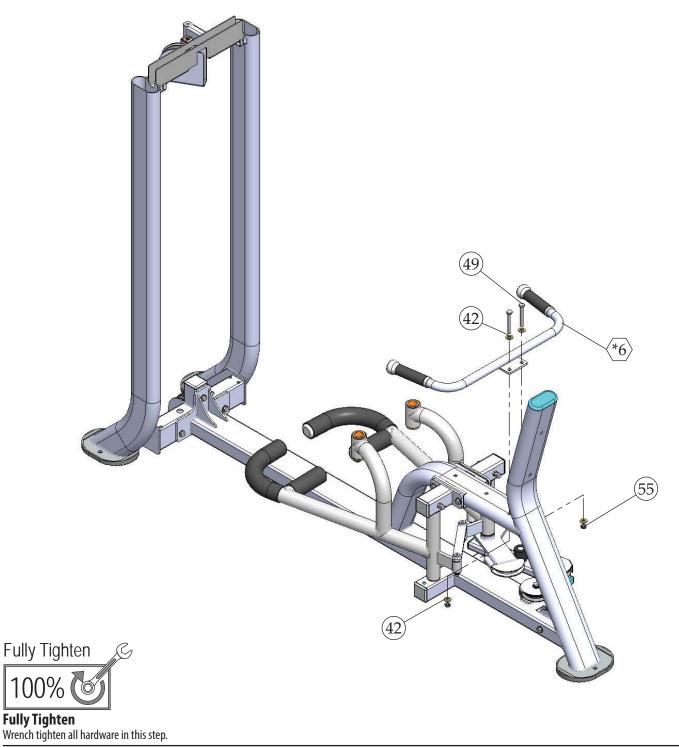

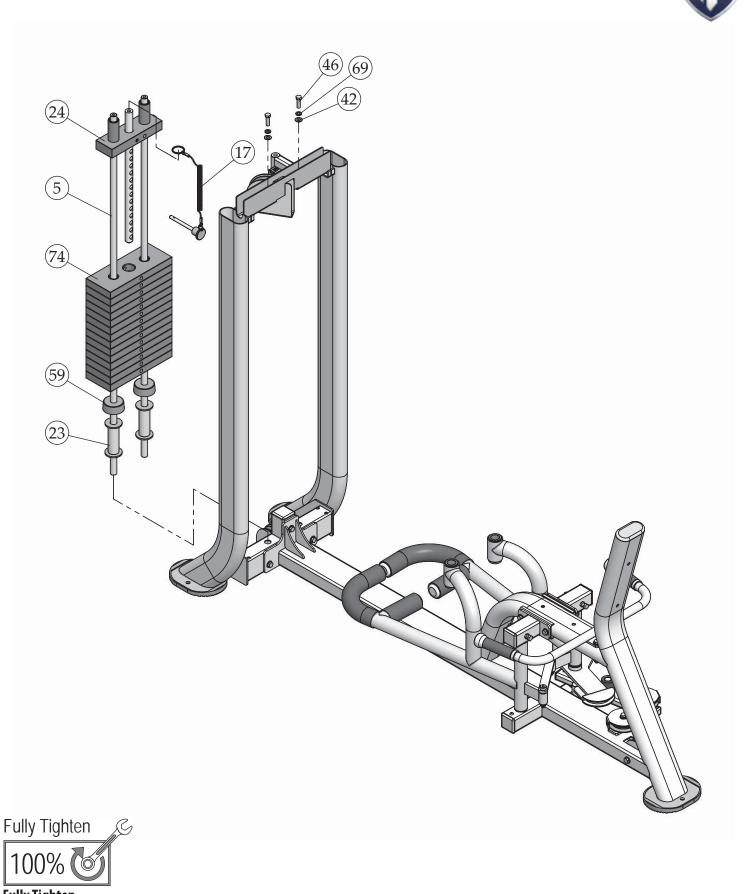

Fully Tighten Wrench tighten all hardware in this step.


16



	Step 4 Assembly List	
Item #	Description	Qty.
5	GUIDE ROD 3/4 RD X 50 3/8	2
17	SELECTOR PIN W/COIL 3/8 X 4 GOLD KNOB	1
23	WEIGHT STACK SPACER 4"	2
24	10 LB TOP PLATE W/ADJ SLTR BAR 19 BLK	1
42	FLAT WASHER SAE Z/P 3/8"	2
46	HEX HEAD CAP SCREW GR-5 Z/P 3/8-16 X 1 1/4	2
59	RUBBER DONUT 3/4 X 2 1/2	2
69	SPLIT LOCK WASHER Z/P 3/8"	2
74	10 LB STEEL WEIGHT PLATE BLACK 4 X 10 (EA)	14
96	LABEL-NUMBERS 10-150 LBS/KGS 7/8 X 3 YELLOW	1


NOTE:

1. TOP PLATE LABEL GOES ON HOLE OFF CENTER AS SHOWN. LABEL WILL COVER HOLE ON CENTER.

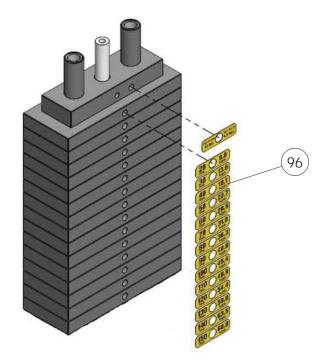



Weight stack label and lubrication instructions

- 1. Wipe front surface of weight stack with rubbing alcohol and wipe dry.
- 2. Peel off back sheet (adhesive side) from label (#96) and make sure that the label remains attached to the application tape.
- 3. Line up left edge of label sheet with outside edge of weight holes.
- 4. Line up the first label to hole on top plate.
- 5. Make sure label is straight and slowly press into place.
- 6. Gently remove application tape and rub each label firmly against the weight stack.
- 7. Allow labels to stand for 2 days to allow adhesive to cure fully.
- 8. Open the lube package provided and apply a thin film of lubricant around the first 3 inches of the guide rods above the top plate.
- 9. After the cables are installed, do a set of reps to spread the lubricant thoroughly.

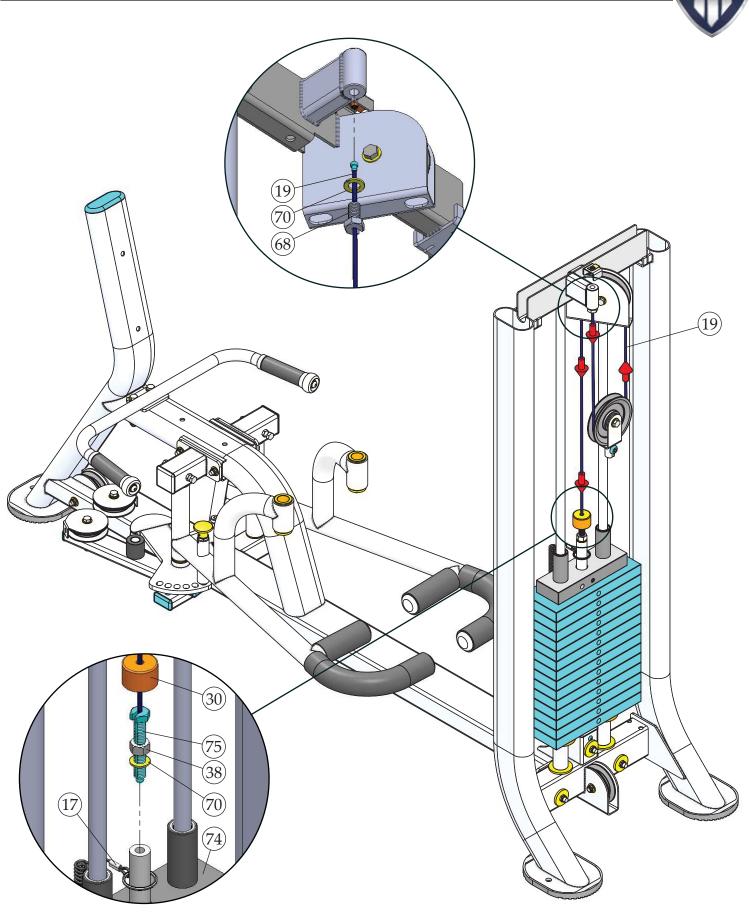

	Step 5 Assembly List	
Item #	Description	Qty.
17	SELECTOR PIN W/COIL 3/8 X 4 GOLD KNOB	1
19	TENSION CABLE	1
30	BLACK NYLON BUMPER	1
38	FINISHED HEX NUT Z/P 1/2-13	1
68	SPLIT BOLT GR-5 Z/P 1/2-13 X 1 1/4 (RND CUT)	1
70	SPLIT LOCK WASHER Z/P 1/2"	2
75	SPLIT BOLT GR-8 Z/P 1/2-13 X 3 1/2 (RND CUT)	1




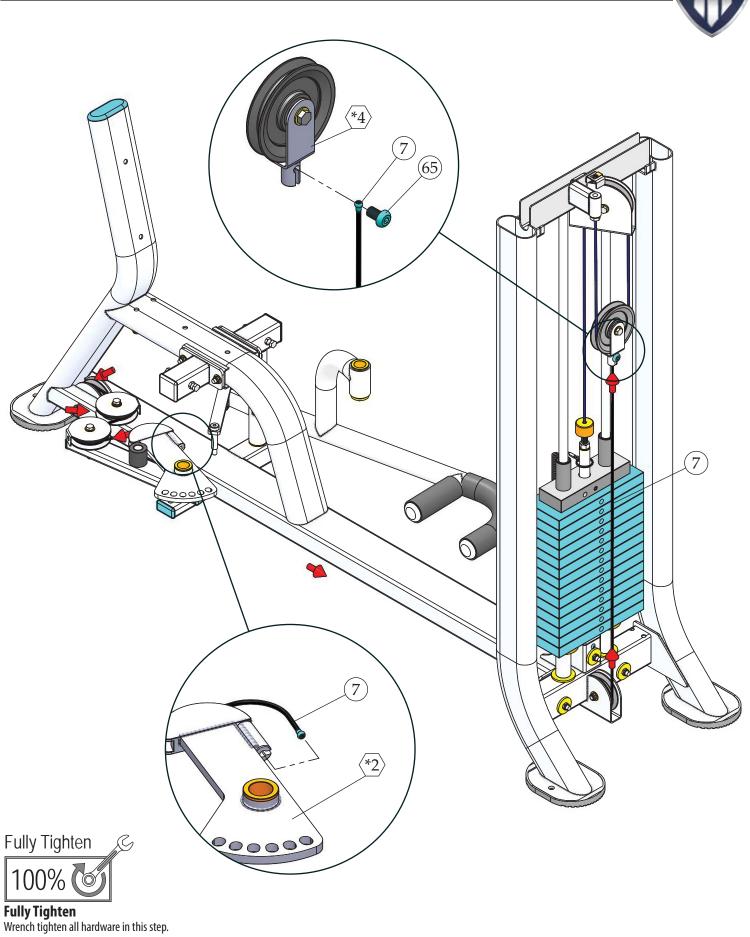




	Step 6 Assembly List	
Item #	Description	Qty.
4	FLOATING PULLEY BRACKET	1
7	INNER OUTER CABLE	1
65	BUTTON HEAD SOCKET CAP SCREW Z/P 7/16-14 X 5/8	1

Step 7

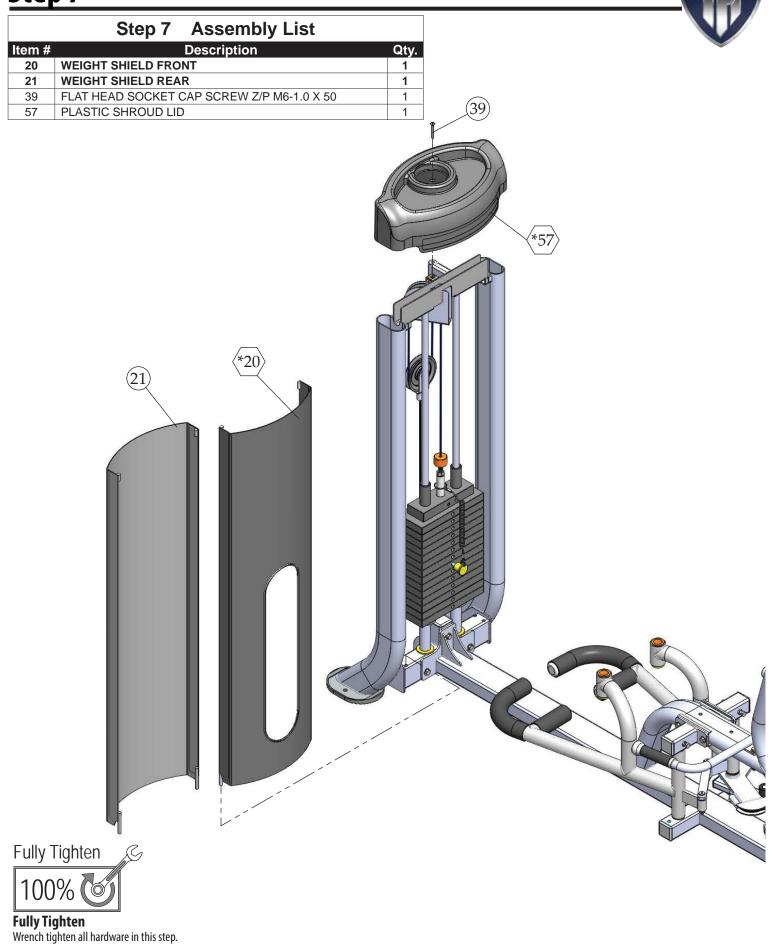

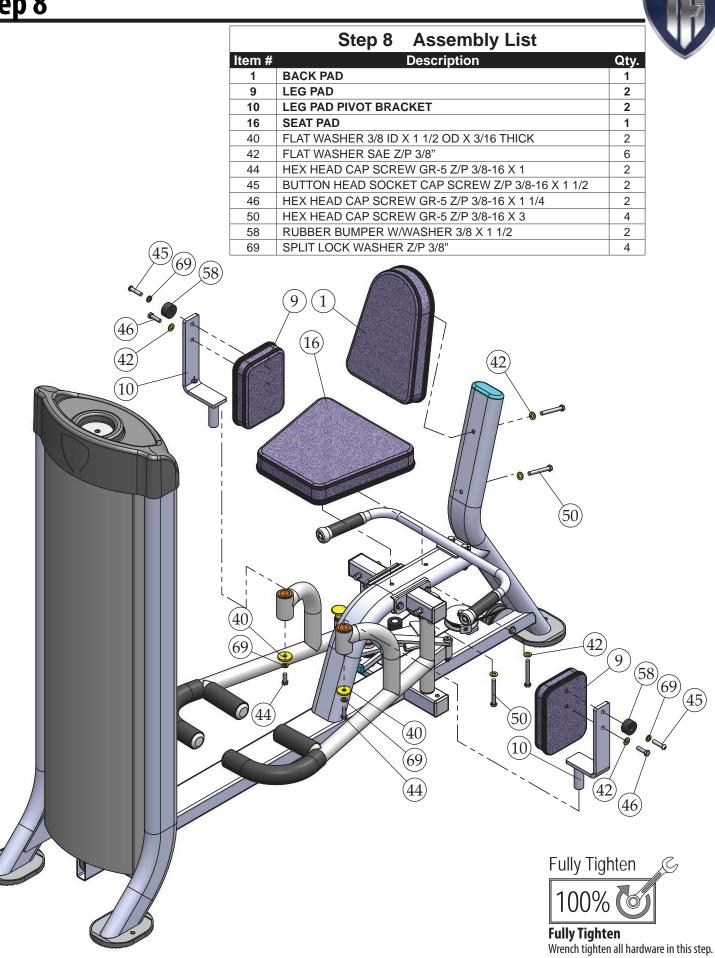

Parts List

COLOR CHART
GRAY= SUB-ASSEMBLY PARTS
BLACK= HARDWARE

CG-9515 Parts List

Item No.	Description	Rev.	Part No.	Qty.	Item No.	Description Rev	. Part No.	Qty
1	BACK PAD	0	UP8819	1	49	HEX HEAD CAP SCREW GR-5 Z/P 3/8-16 X 2 3/4	BNH2045	2
2	CAM 0		UP8820	1	50	HEX HEAD CAP SCREW GR-5 Z/P 3/8-16 X 3	BNH2046	8
3	CAM SUPPORT TUBE 0			1	51	HEX HEAD CAP SCREW GR-5 Z/P 3/8-16 X 4 1/2	BNH2052	1
4	FLOATING PULLEY BRACKET	0	UP8822	1	52	HEX HEAD CAP SCREW GR-5 Z/P 3/8-16 X 5 1/4	BNH4270	2
5	GUIDE ROD 3/4 RD X 50 3/8	0	UP8461	2	53	HEX KEY ALLOY 7/32"	BNH0575	1
6	HANDLES	0	UP8823	1	54	FINISHED HEX JAM NUT Z/P 3/8-16	BNH0200	4
7	INNER OUTER CABLE	0	UP8824	1	55	NYLON INSERT THIN PATTERN LOCK NUT Z/P 3/8-16	BNH2026	14
8	LEFT LEG ARM	0	UP8825	1	56	NYLON PULLEY 3/8 X 1 X 4 1/2 BLACK	BNH0506	2
9	LEG PAD	0	UP8826	2	57	PLASTIC SHROUD LID	BNH3393	1
10	LEG PAD PIVOT BRACKET	0	UP8827	2	58	RUBBER BUMPER W/WASHER 3/8 X 1 1/2	BNH0514	2
11	MAIN FRAME	0	UP8828	1	59	RUBBER DONUT 3/4 X 2 1/2	BNH0068	2
	PIVOT ACTUATOR PLATE	0	UP8829	1	60	RUBBER GRIP 1 ID X .125 X 4	BNH0931	2
	PIVOT AXLE 1"X 13 1/4"	0	UP7519	2	61	RUBBER TUBE 1.625 ID X .125 WALL X 5	BNH3696	2
14	PIVOT AXLE SUPPORT TUBE	0	UP8830	2	62	RUBBER TUBE 1.625 ID X .125 WALL X 12	BNH3697	2
	RIGHT LEG ARM	0	UP8831	1	63	SHROUD LID RUBBER MAT LARGE	BNH3394	1
16	SEAT PAD	0	UP8832	1	64	SHROUD LID RUBBER MAT SMALL	BNH3395	1
10	SELECTOR PIN W/COIL 3/8 X 4 GOLD KNOB	0	UP3035	1	65	BUTTON HEAD SOCKET CAP SCREW Z/P 7/16-14 X 5/8	BNH3709	1
17	SMALL COVER PLATE 3 1/2" PULLEY	0	UP8833	2	66	PULL PIN 1/2 X 5 5/8 STIFF SPRING (YELLOW KNOB)	BNH4075	1
10	TENSION CABLE	0	UP8834	1	67	SOCKET SET SCREW Z/P 10-32 X 1/8	BNH2088	1
20	WEIGHT SHIELD FRONT	0	UP8468	1		SPLIT HEX TAP BOLT GR-5 Z/P 1/2-13 X 1 1/4 (RND CUT)	BNH2184	1
	WEIGHT SHIELD REAR	-		1	68	SPLIT LOCK WASHER Z/P 3/8"		9
21		0	UP8459		69	SPLIT LOCK WASHER Z/P 1/2"	BNH2520	2
22	WEIGHT STACK FRAME	0	UP8835	1	70		BNH0572	-
23	WEIGHT STACK SPACER 3"	U	UP8836	2	71	SUPER LUBE TEFLON LUBRICANT 82340	BNH0704	2
24	10 LB TOP PLATE W/ADJ SLTR BAR 19 BLK WTS ASM		BNH1982 BNH3082	1	72	HEX KEY ALLOY 3/32"	BNH0372	1
25	ALUMINUM CAP 1.040" RD (026-01M0937)				73	U-STYLE TAPPED HOLE NUT M6	BNH3351	1
26	ALUMINUM INSERT CAP 1 3/4 RD WITH O-RINGS ALUMINUM INSERT CAP 1 X 2			4	74	10 LB STEEL WEIGHT PLATE BLACK 4 X 10 (EA)	BNH4345	14
27				3	75	SPLIT HEX TAP BOLT GR-8 Z/P 1/2 -13 X 3 1/2 (RND CUT)	BNH2977	1
28	ALUMINUM INSERT CAP 2 SQ		BNH1502		76	FACILITY SIGN BE ALERT! THE FITNESS EQUIPMENT	BNH3138	1
29	ALUMINUM INSERT CAP ELLIPTICAL 100MM X 50MM		BNH2398		77	LABEL-CAUTION CHECK PULL-PIN IS FULLY 1 1/2 X 1 3/8	BNH2912	1
30	BLACK NYLON BUMPER		BNH3308		78	LABEL-CG-9500 SERIES PANTONE ON CHROME BASE	BNH3172	1
31	BLACK NYLON PULLEY 3/8 X 1 X 3 1/2 (P-35375-H)		BNH0553		79	LABEL-DANGER CHECK RETAINING NUT 1.5 X 1	BNH3146	1
32	BRONZE BUSHING 1 X 1 1/4 X 3/4 X 1 1/2 X 1/8		BNH0527 BNH0528		80	LABEL-DANGER DO NOT LEAN AGAINST, 1.75X2.375	BNH3145	2
33	BRONZE BUSHING SAE 841 (302033) .502X.628 X 1/2 X 7/8 X 1/8'				81	LABEL-DANGER USE THIS EQUIP. ONLY (COMM. LINE) 1.5 X 2.375	-	1
34	BUTTON HEAD SOCKET CAP SCREW GR-8 Z/P 1/4-20 X 3/8			7	82	LABEL-EXERCISE CHART (CG-9515)	BNH3195	1
35	BUTTON HEAD SOCKET CAP SCREW Z/P 3/8-16 X 1			2	83	LABEL-IMPORTANT ADJUST CABLE TENSION HERE	BNH2924	1
36	EDGE PROTECTOR CHROME 11 GA		BNH1724	1	84	LABEL-IMPORTANT CHECK CABLES	BNH3113	1
37	ELLIPTICAL RUBBER SHOE		BNH3323	3	85	LABEL-IMPORTANT FOR SMOOTH PERFORMANCE	BNH2925	1
38	FINISHED HEX NUT Z/P 1/2-13		BNH0206	1	86	LABEL-INSPECTIONS RECOMMENDED INSPECTION	BNH3137	1
39	FLAT HEAD SOCKET CAP SCREW Z/P M6-1.0 X 50		BNH3705		87	LABEL-SCHEDULE REPLACEMENT PARTS	BNH3135	1
40	FLAT WASHER 3/8 ID X 1 1/2 OD X 3/16 THICK		BNH1717	5	88	LABEL-TFI SERIAL NO. 2.5 X 1.5	BNH3147	2
41	HEX KEY ALLOY 4 MM		BNH3708	1	89	LABEL-WARNING ANCHOR BOLT, 2 X 1 1/4"	BNH3089	3
42	FLAT WASHER SAE Z/P 3/8"		BNH2030	32	90	LABEL-WARNING ATTENTION USERS! 2X1.5	BNH2911	1
43	HARD PVC STOPPER 20MM ID X 38MM OD X 38MM		BNH3695	1	91	LABEL-WARNING KEEP BODY, HANDS 1 1/2 X 2 5/8	BNH2909	1
44	HEX HEAD CAP SCREW GR-5 Z/P 3/8-16 X 1		BNH2037	2	92	LABEL-WARNING KEEP BODY, HANDS 1X2-5/8	BNH2926	1
45	BUTTON HEAD SOCKET CAP SCREW Z/P 3/8-16 X 1 1/2		BNH2035	2	93	LABEL-WARNING_SERIOUS INJURY OR DEATH	BNH3134	1
46	HEX HEAD CAP SCREW GR-5 Z/P 3/8-16 X 1 1/4		BNH2038	8	94	LABEL-COMMERCIAL WARRANTY	BNH3181	1
47	HEX HEAD CAP SCREW GR-5 Z/P 3/8-16 X 1 3/4			3	95	LABEL-TFI 4 HIGH X 4.23 WIDE BLUE AND CHROME	BNH3699	1
48	HEX HEAD CAP SCREW GR-5 Z/P 3/8-16 X 2		BNH2041	1	96	LABEL-NUMBERS 10-150 LBS/KGS 7/8 X 3 YELLOW & BLACK	BNH3096	1
			PRE AS	SEMI	BLED CO	MPONENTS		
Item No.	Description	Rev.			r		. Part No.	Qty
*2	CAM	0	UP8820X1		*14	PIVOT AXLE SUPPORT TUBE 0	UP8830X1	2
*3	CAM SUPPORT TUBE	0	UP8821X1		*15	RIGHT LEG ARM 0	UP8831X1	1
*4		-	UP8821X1		*15	WEIGHT SHIELD FRONT 0	UP8831X1 UP8468X1	1
*	FLOATING PULLEY BRACKET 0			1	20		010400A1	1

WEIGHT STACK FRAME

PLASTIC SHROUD LID

0 UP8823X1

0 UP8825X1

0 UP8828X1

1

1

1

*22

*57

0 UP8835X1

BNH3393X1

1

1

*6


*8


*11

HANDLES

LEFT LEG ARM

MAIN FRAME

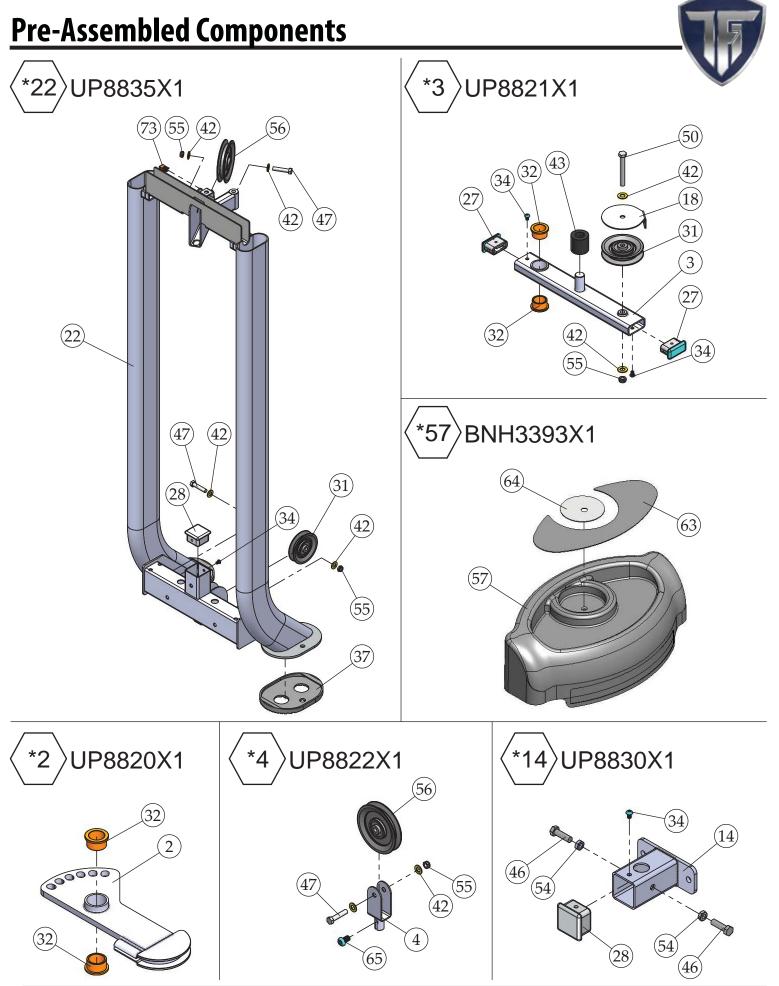

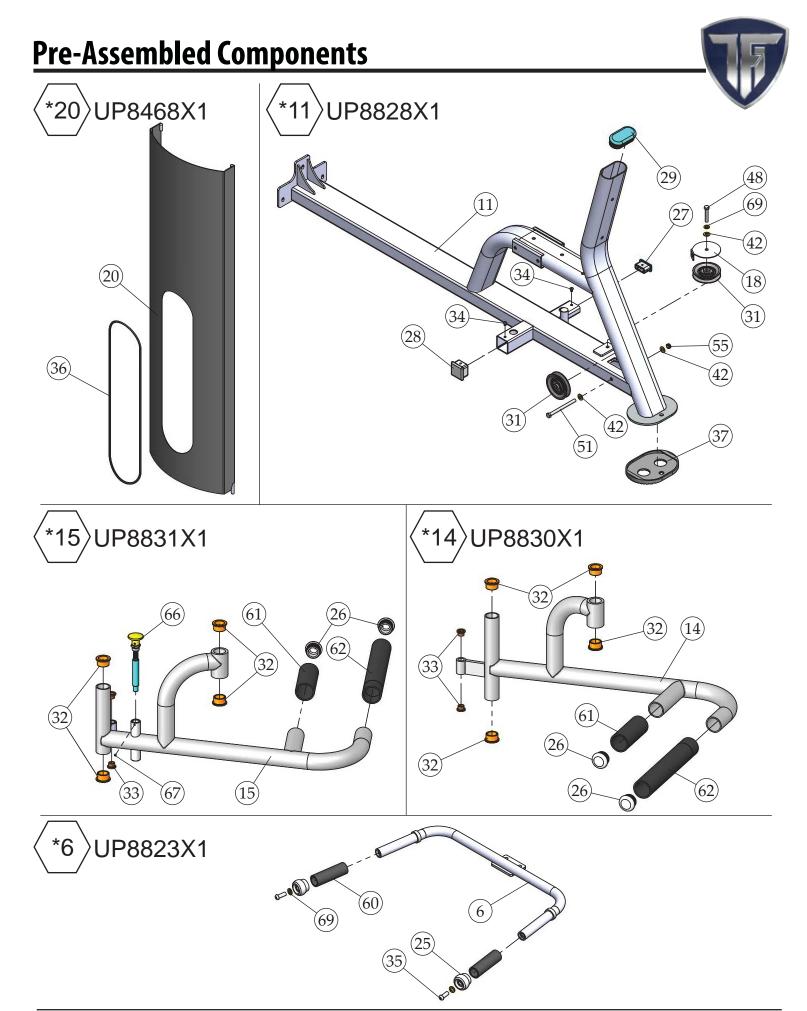



COMMERCIAL WARRANTY*

This warranty applies only in the United States to the products manufactured or distributed by TuffStuff Fitness International Inc. (TFI) under the CALGYM brand name. TFI warrants to the original purchaser that CALGYM equipment will be free from defects in material and workmanship. All warranty periods begin to run from the date of purchase to the original purchaser. The warranty and remedies set forth herein are conditioned upon proper storage, installation, use and maintenance and conformance with any recommendations of TFI. This warranty does not cover products not manufactured by TFI or products which are altered without the express written consent of TFI.

COMMERCIAL WARRANTY*:

TEN (10) YEARS:	Frames, welds, cams and weight plates.							
FIVE (5) YEARS:	Pivot bearings, pulleys, bushings, gas shocks and guide rods.							
ONE (1) YEAR:	Belts, linear bearings and pull-pin components.							
	All other parts not mentioned, one (1) year from the date of							
	purchase to the original purchaser.							
SIX (6) MONTHS:	Upholstery, cables, finish and rubber grips.							

*Not recommended for membership based or dues paying facilities.

The obligation of TFI under this warranty is limited to repairing or replacing warranted defective parts as TFI may elect, at TFI's facility in Chino, California, without charge to the purchaser. Purchaser is responsible for installation of repaired or replaced parts, and all transportation and insurance costs on returned or replaced equipment to and from TFI's facility in Chino.

THE FOREGOING SHALL CONSTITUTE THE SOLE REMEDY OF THE PURCHASER AND THE SOLE LIABILITY OF TFI WITH REGARD TO WARRANTY, WHETHER EXPRESS OR IMPLIED BY OPERATION OF LAW OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS. TFI SHALL IN NO EVENT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL LOSSES, DAMAGES, OR EXPENSES IN CONNECTIONS WITH EXERCISE PRODUCTS. TFI'S LIABILITY HEREUNDER IS EXPRESSLY LIMITED TO THE REPAIRS OR REPLACEMENTS OF WARRANTED DEFECTIVE PARTS.

This written warranty is the final, complete and exclusive agreement of the parties with respect to the quality or performance of the equipment and no action for breach of this written warranty or any implied warranty shall be commenced more than one (1) year after the accrual of the cause of action. No modification of this warranty or waiver of its terms shall be binding on either party unless approved in writing by an authorized representative of the party. Contact TuffStuff Fitness International, Inc. at 13971 Norton Avenue, Chino, CA 91710, before returning any defective equipment.

This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state.



Write your Serial number here for future reference

Purchase Date



TuffStuff Fitness International, Inc.

13971 Norton Avenue, Chino, CA 91710, USA. Ph 909-629-1600 Fx 909-629-4967 www.tuffstuffitness.com service@tuffstuff.net or service1@tuffstuff.net